


www.lpwindowcontrols.co.uk

Tel: 01268 724506

INSTALLATION & USER MANUAL CCU1 CLIMATE CONTROL



CONNECTIONS

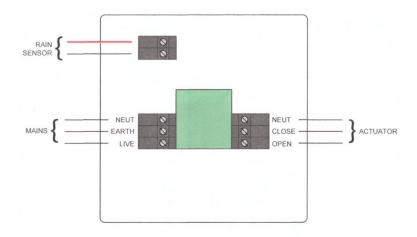

PLEASE NOTE

The installation of all electrical items must be undertaken by a qualified professional. Mains power must be supplied via a 5-Amp fused spur.

Do not use cable thicker than 1.5mm and multi-strand if possible for flexibility. This controller will fit into any standard one-gang surface or flush 35mm back box.

OPERATION

- 1 If you turn the control knob completely to the left the windows will close and remain closed, alternatively if you rotate the knob completely to the right the windows will open and stay open irrespective of the weather conditions.
- Turn the knob to any position between the extremes and you engage the auto mode which will open or close the windows based upon the temperature selected on the dial. Should it rain whilst in auto mode the controller will close the windows resuming auto opening when the sensor has dried.
- For the rain sensor to operate and the window/s to close automatically the dial must be set on a temperature and not at either extreme of its travel.
- This is not a scientific instrument and therefore its temperature settings are only to be used as a guide as there may be inaccuracies between the controller and other devices.